

ORIGINAL



ERSATZ- UND MONTAGETEILE


roofSTAR 7 - Dachfenster

Montageanleitung für Dachstärken von 33-45 mm

Das Montagekit enthält:

- 14x Montageböcke für Dachstärken 33-36 mm
- 14x Montageböcke für Dachstärken 37-40 mm
- 14x Montageböcke für Dachstärken 41-45 mm

- 14x Schrauben 4x20 mm

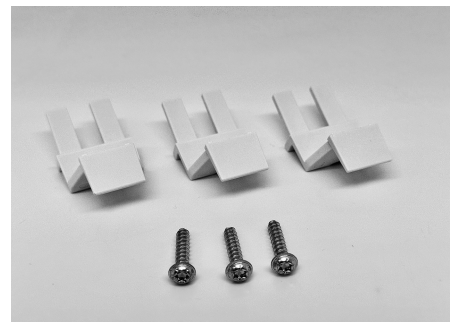

Für die korrekte Montage der roofSTAR 7 Dachhaube bei Dachstärken von 33-45 mm:

1. Genaue Dachstärke ermitteln
2. Die standardmäßig mitgelieferten Montageböcke mit den im Kit gelieferten austauschen (Dachstärke beachten!) und mittels der im Kit enthaltenen Schrauben befestigen.

Ein Qualitätsprodukt der
PREMTEC GmbH (D)



AM-Distribution: BRUNNER GmbH - Bolzano/Bozen (I) - www.brunner.it

ORIGINAL



SPARE AND ASSEMBLY PARTS


roofSTAR 7 - Roof window

Installation instructions for roof thicknesses of 33-45 mm

The mounting kit contains:

- 14x Brackets for roof thicknesses 33-36 mm
- 14x Brackets for roof thicknesses 37-40 mm
- 14x Brackets for roof thicknesses 41-45 mm

- 14x Screws 4x20 mm

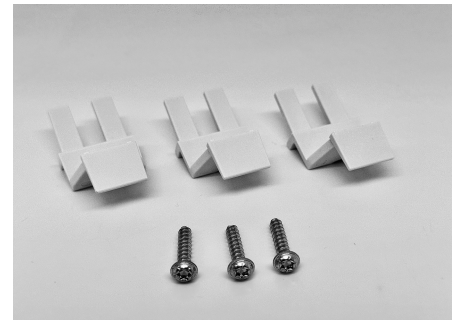

For correct installation of the roofSTAR 7 roof window for roof thicknesses of 33-45 mm:

1. Determine the exact roof thickness
2. Replace the mounting brackets supplied as standard with those supplied in the kit (note the roof thickness!) and fasten using the screws included in the kit.

A quality product from
PREMTEC Ltd. (D)



AM-Distribution: BRUNNER Ltd. - Bolzano/Bozen (I) - www.brunner.it